


ENGINE 646.951 in MODEL 211.004
ENGINE 646.961 in MODELS 211.006 /206 /606
ENGINE 647.961 in MODELS 211.016 /216 /616
ENGINE 648.961 in MODELS 211.023 /026 /223 /226
ENGINE 112.913 in MODELS 211.061 /261
ENGINE 112.949 in MODELS 211.065 /265
ENGINE 113.967 in MODELS 11.070 /270
ENGINE 113.990 in MODELS 211.076 /276

- 1 Fan shroud
- 2 Screw
- 3 Fan wheel
- 4 Tie strap
- 5 Connector
- 6 Screw
- 7 Electric fan

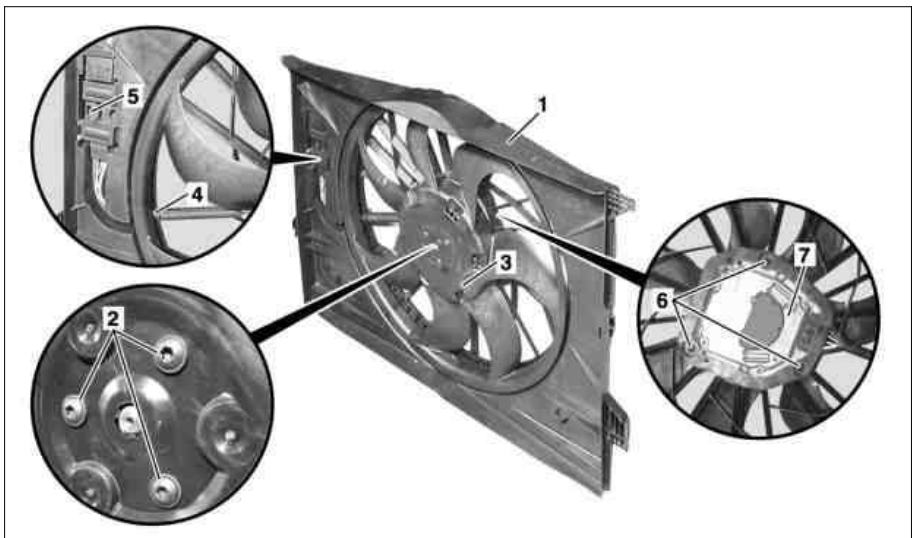

P20.40-2036-05

	Remove/Install		
	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
1	Remove fan shroud (1).	Engines 112, 113 Engine 113.990 Engine 646, 647, 648	AR20.40-P-6800TB AR20.40-P-6800TC AR20.40-P-6800T
2.1	If required, remove the screws (2) and dismount the fan wheel (3)		
3	Remove tie straps (4)		
4	Unclip the electrical connector (5) from the fan shroud (1)		
5	Remove the screws (6) and dismount the electric fan (7)		
6	Install in the reverse order		
7 	Read out fault memory and erase if required Connect STAR DIAGNOSIS and read out fault memory	Diagnosis system STAR DIAGNOSIS	*WH58.30-Z-1048-13A AD00.00-P-2000-04A

Commercially available tools

Number	Designation	
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car	6511 1801 00